



A318

Aircraft Rescue and Fire Fighting Chart ARFC

The content of this document is the property of Airbus S.A.S.
It is supplied in confidence and commercial security on its
contents must be maintained.
It must not be used for any purpose other than that for which it is
supplied, nor may information contained in it be disclosed to un-
authorized persons. It must not be reproduced in whole or in part
without permission in writing from the owners of the copyright.
Requests for reproduction of any data in this document and the
media authorized for it must be addressed to Airbus.

© Airbus S.A.S. 2002. All rights reserved.

AIRBUS S.A.S.
31707 BLAGNAC CEDEX, FRANCE
CUSTOMER SERVICES
TECHNICAL DATA SUPPORT AND SERVICES
PRINTED IN FRANCE
© AIRBUS S.A.S. 2002
ALL RIGHTS RESERVED

AN EADS COMPANY

 A318
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

NOTE

**THIS CHART GIVES THE GENERAL LAYOUT OF THE A318 STANDARD VERSION.
THE NUMBER AND ARRANGEMENT OF THE INDIVIDUAL ITEMS VARY WITH THE CUSTOMERS.**

ISSUED BY:

AIRBUS S.A.S.
CUSTOMER SERVICES
TECHNICAL DATA SUPPORT AND SERVICES
31707 BLAGNAC CEDEX
FRANCE

REVISION DATE: APRIL 2007
REFERENCE : N_RF_000000_1_A318000




AIRCRAFT RESCUE AND FIRE FIGHTING CHART

 A318
**AIRCRAFT RESCUE AND
FIRE FIGHTING CHART**


TABLE OF CONTENTS

Page 1	Highly Flammable Materials and Hazardous Components - Location
Page 2	Composite Materials - Location
Page 3	Landing Gear Ground Lock Safety Pin - Installation
Page 4	Interphone Jack Sockets - Location
Page 5	Evacuation/Escape Slide/Raft - Location
Page 6	Passenger/Crew Doors - Opening
Page 7	Cargo Doors - Opening
Page 8	Structural Break-in Points - Principle
Page 9	Batteries and Control Panel - Location
Page 10	Emergency Exit Light Control Panel - Location
Page 11	Emergency Exits - Opening
Page 12	Engine and APU Controls and FIRE Panels - Location
Page 13	Bulk Cargo Compartment Door Control
Page 14	APU Compartment Access
Page 15	Aircraft Ground Clearances

A318 AIRCRAFT RESCUE AND FIRE FIGHTING CHART

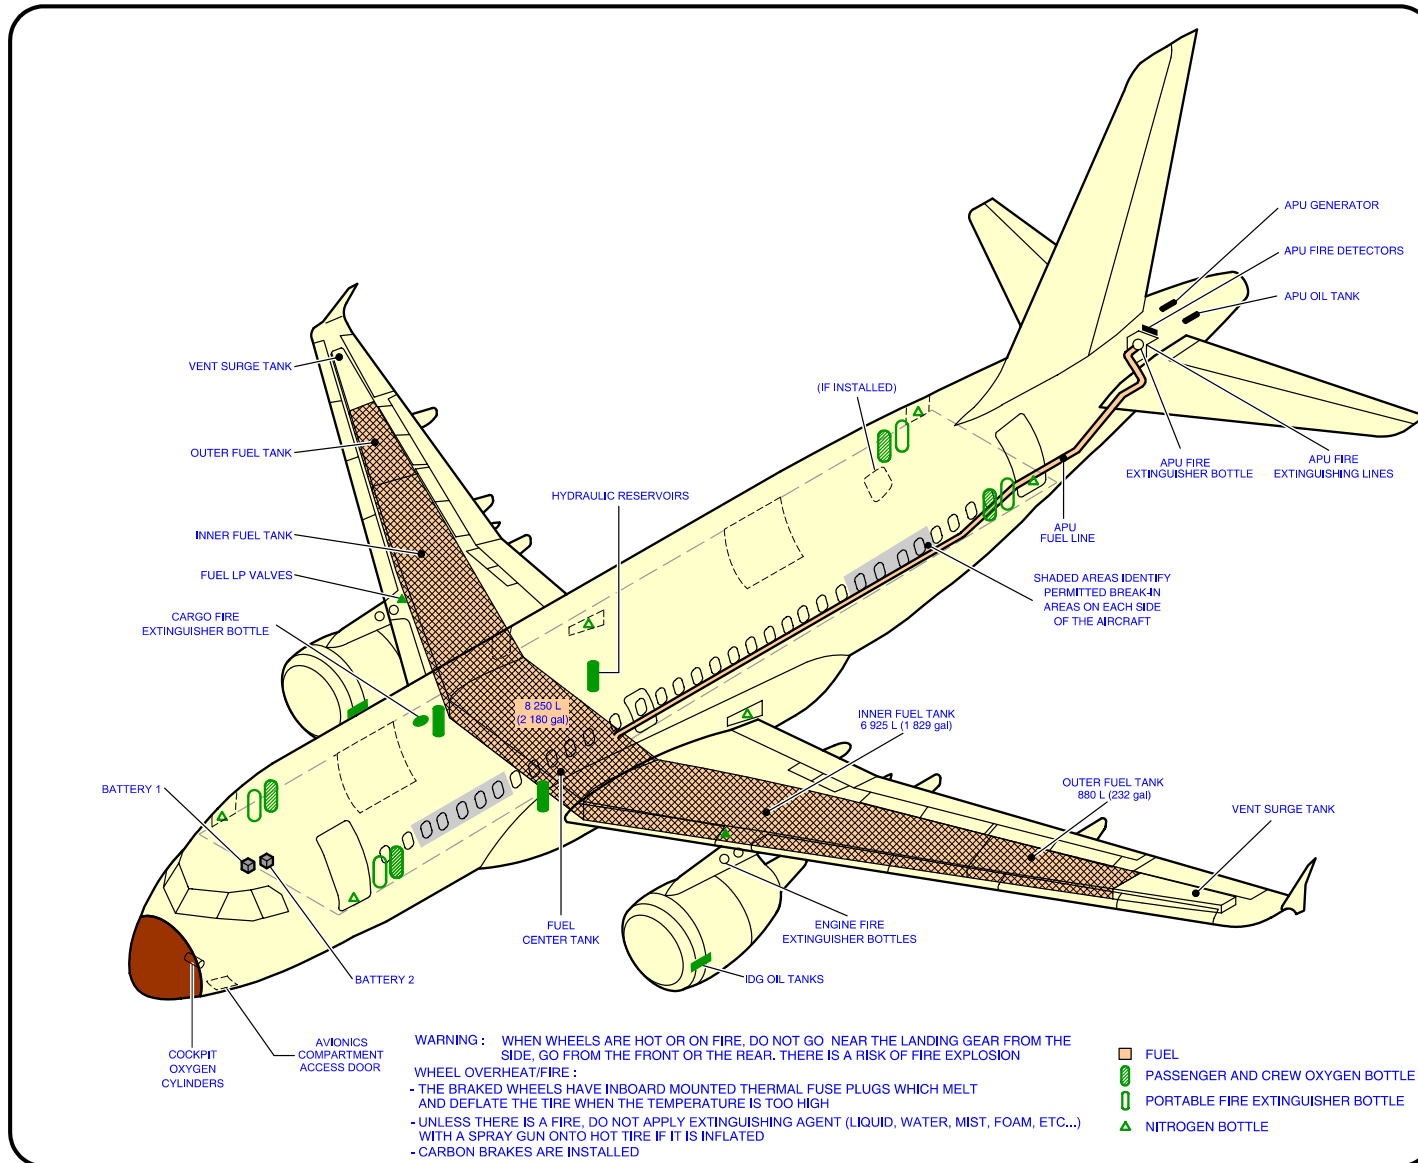


Highly Flammable Materials and Hazardous Components - Location

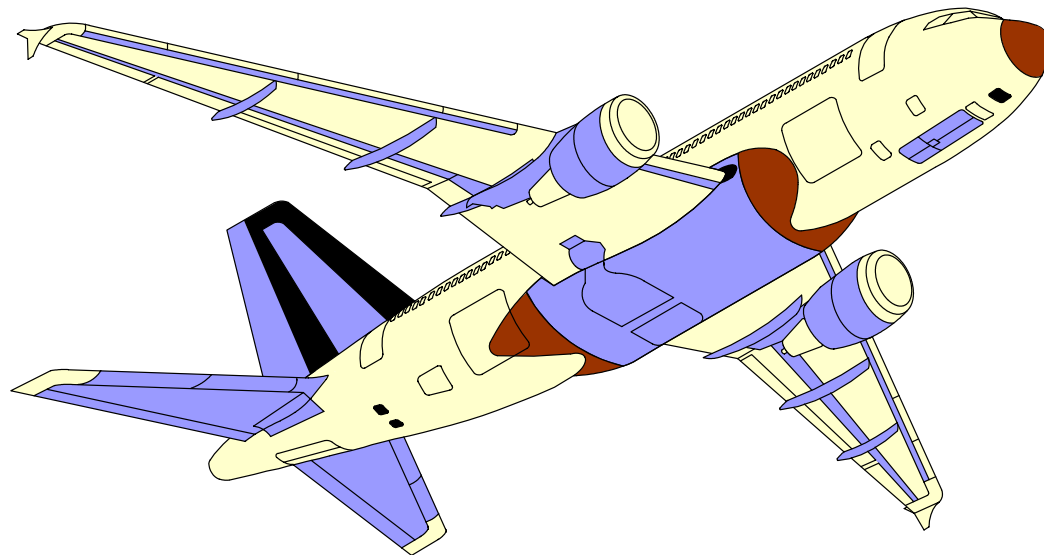


Composite Materials - Location

 A318
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

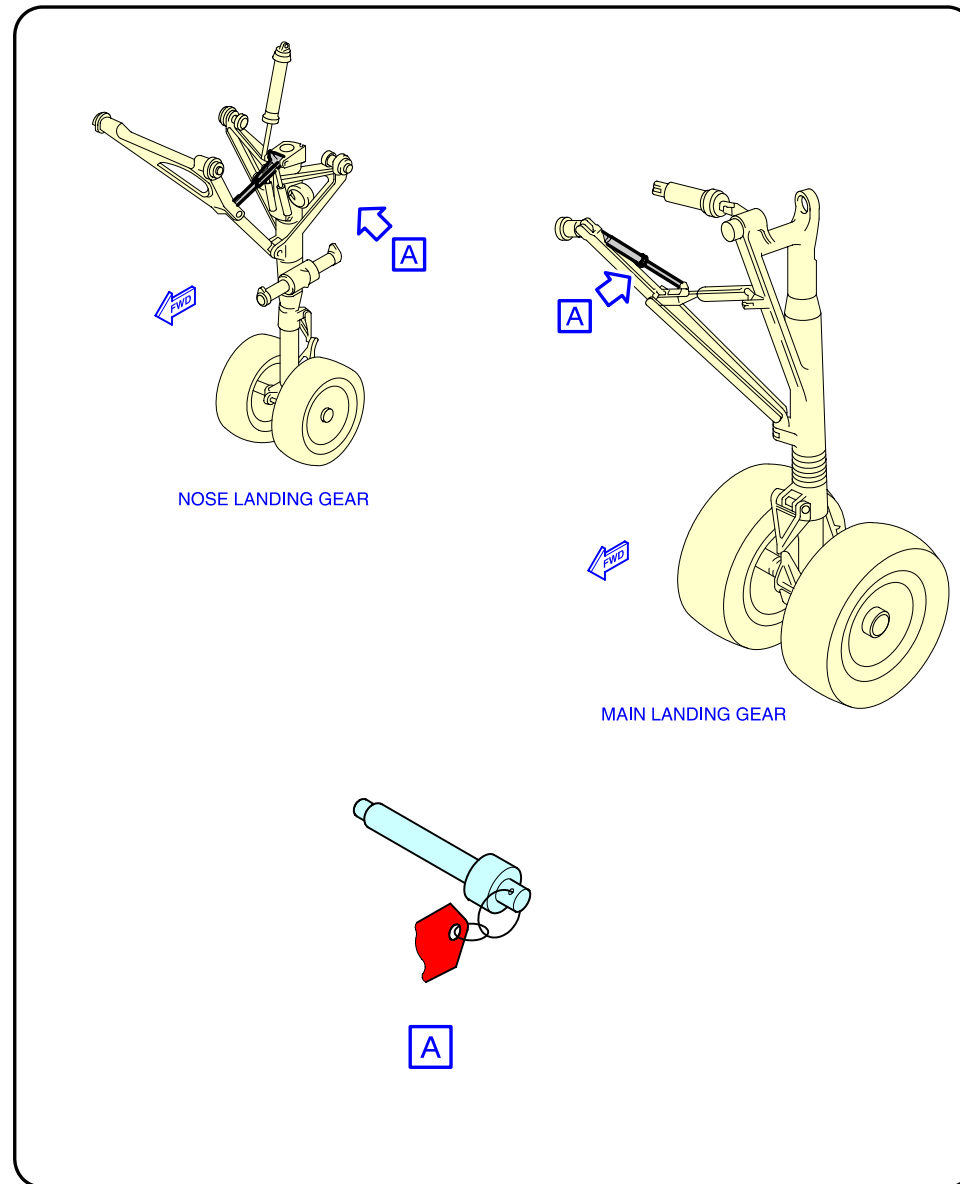

Landing Gear Ground Lock Safety Pin - Installation

 A318
**AIRCRAFT RESCUE AND
FIRE FIGHTING CHART**

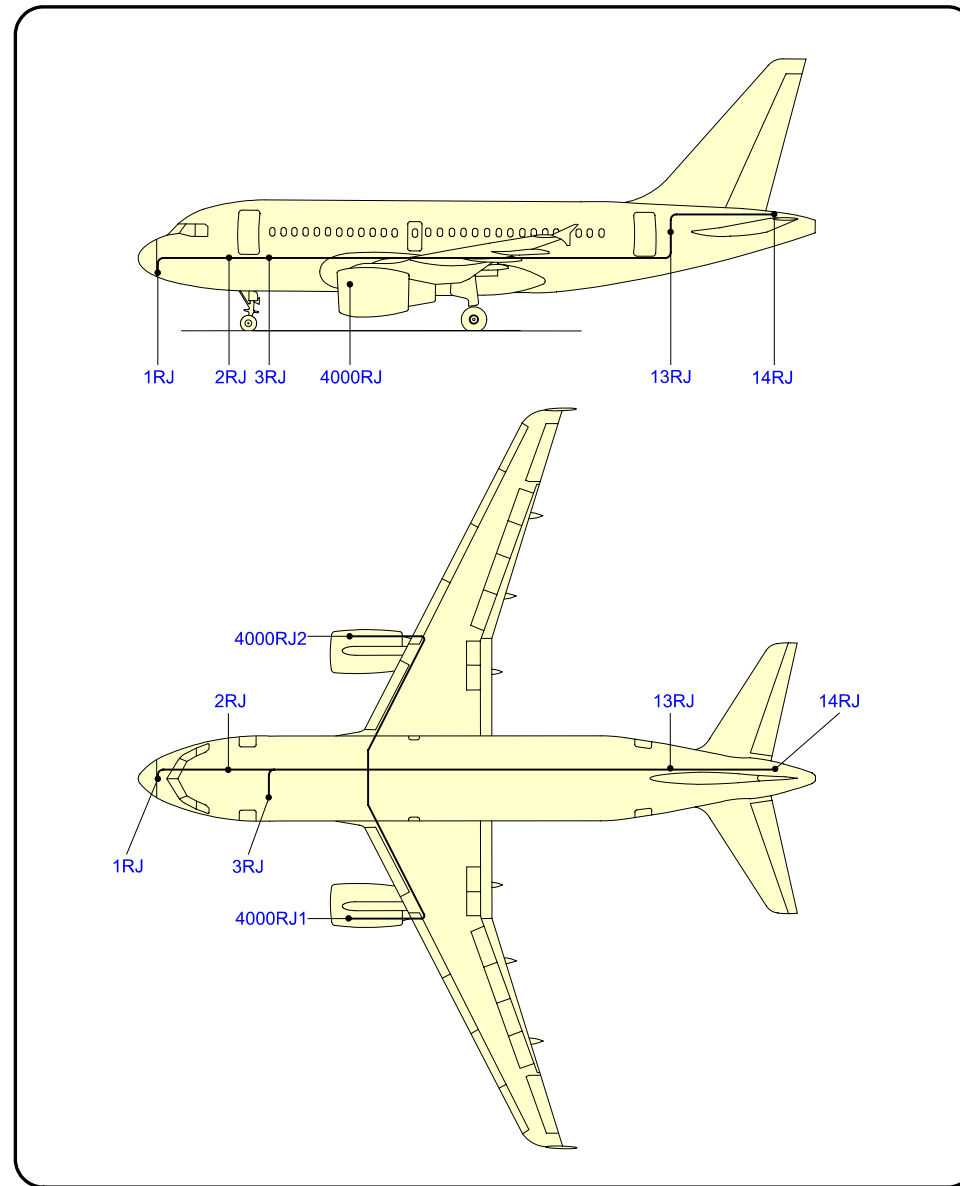


Interphone Jack Sockets - Location

 A318
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

EMERGENCY EVACUATION

EMERGENCY DESCENT DEVICE
THROUGH WINDOW OPENING

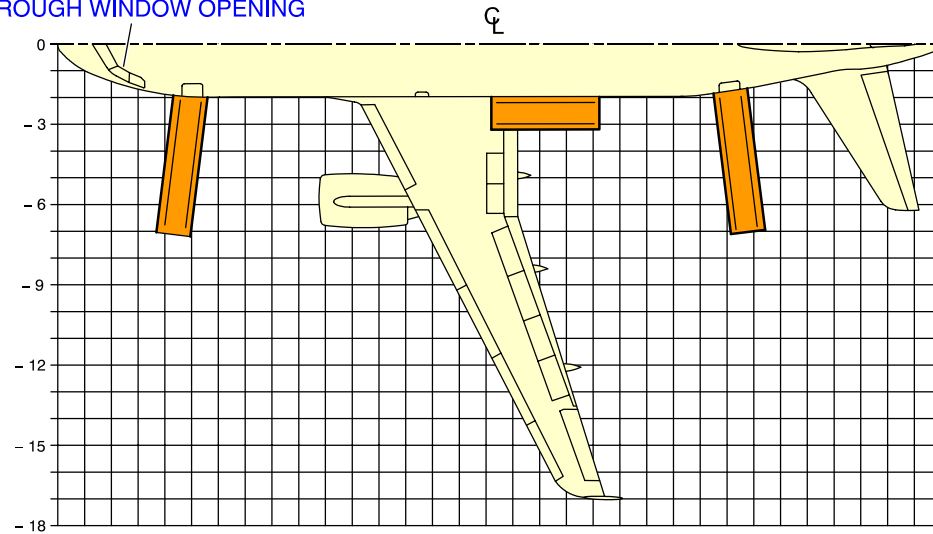

GRID EQUALS 1 m (3.28 ft) IN REALITY


Evacuation/Escape Slide/Raft - Location

EXTERNAL CONTROL HANDLES OF PASSENGER/CREW DOORS


OPENING OF THE PASSENGER/CREW DOORS

TO OPEN :

- 1 - MAKE SURE THAT CABIN PRESSURE AND SLIDE ARMED WARNING LIGHTS ARE OFF
 - 2 - PUSH FLAP TO HOLD HANDLE
 - 3 - LIFT HANDLE FULLY UP TO HORIZONTAL GREEN LINE
- DOOR OPENS OUTWARDS

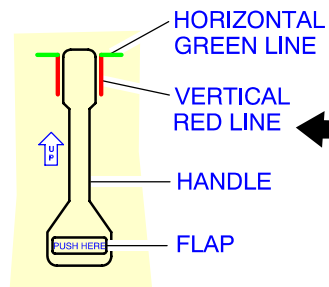


HANDLE SHOWN IN
CLOSED POSITION

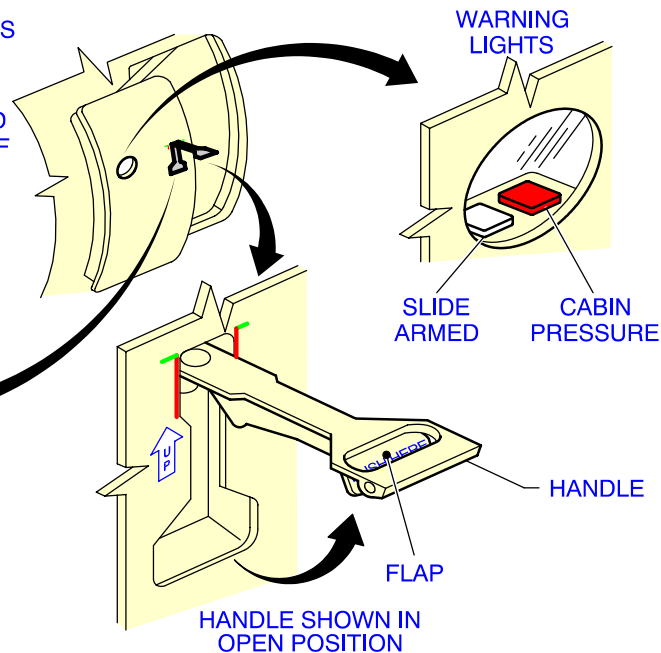

HANDLE SHOWN IN
OPEN POSITION

FWD AND AFT CARGO COMPARTMENT DOOR CONTROLS

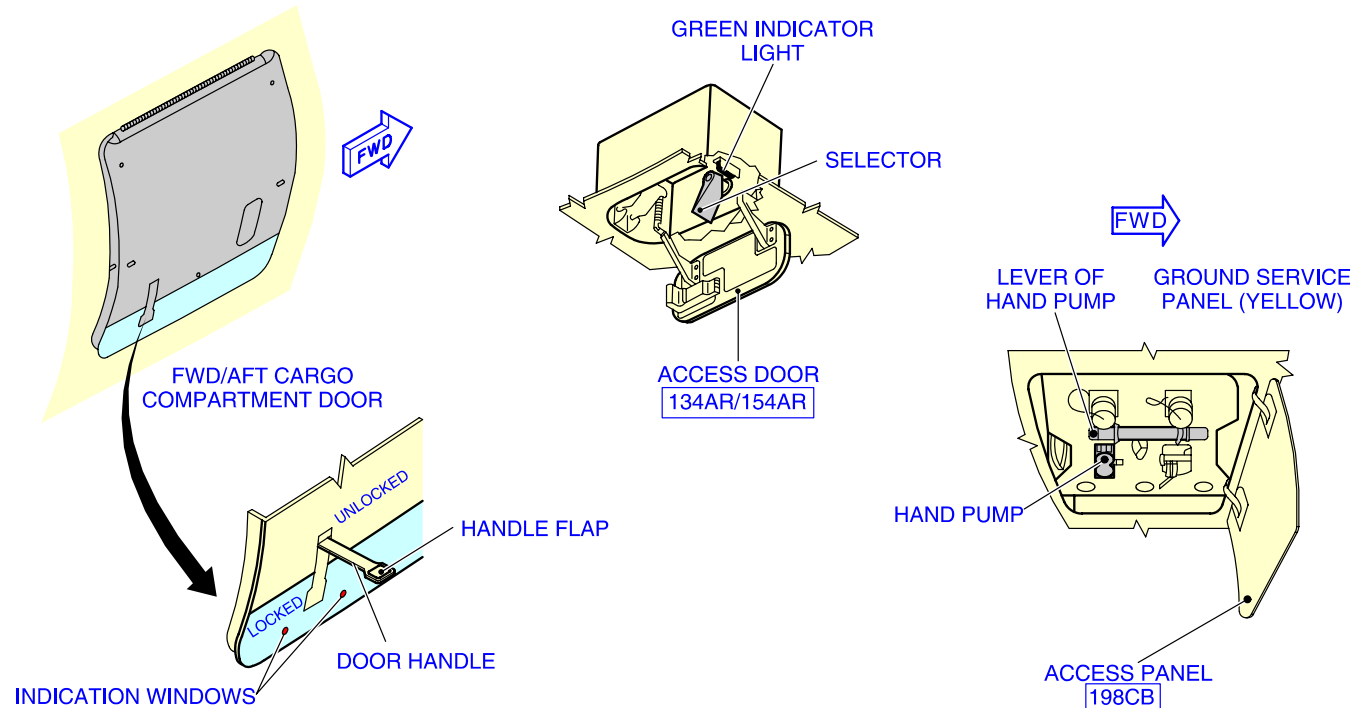


NORMAL OPERATION:

- 1 - PUSH THE DOOR HANDLE FLAP IN TO RELEASE THE DOOR HANDLE FROM THE CATCH OF THE DOOR STRUCTURE.
- 2 - PULL THE DOOR HANDLE AWAY AND UP FROM THE DOOR STRUCTURE TO THE FULLY "UNLOCKED" POSITION. YOU CAN SEE A RED MARK THROUGH ALL THE INDICATION WINDOWS.
- 3 - OPEN THE ACCESS DOOR 134AR/154AR BELOW THE FUSELAGE TO GET ACCESS TO THE SELECTOR.
- 4 - MOVE THE SELECTOR TO THE "OPEN" POSITION AND HOLD IT UNTIL THE GREEN INDICATOR LIGHT COMES ON. (DOOR FULLY OPEN AND LOCKED)
- 5 - RELEASE THE SELECTOR.

MANUAL OPERATION:



(TWO PERSONS NECESSARY FOR THIS OPERATION)

- 1 - DO THE OPERATIONS 1 TO 3 AS FOR "NORMAL OPERATION".
- 2 - MOVE THE SELECTOR OF THE CONTROL PANEL TO THE "OPEN" POSITION AND HOLD IT DURING OPERATION OF THE HAND PUMP.
- 3 - IN THE BELLY FAIRING AREA, OPEN THE ACCESS PANEL 198CB OF THE YELLOW GROUND SERVICE PANEL.
- 4 - INSTALL THE HAND PUMP LEVER ON THE HAND PUMP AND OPERATE IT UNTIL THE CARGO DOOR IS FULLY OPENED. (YOU CAN FEEL THE FORCE INCREASE ON THE HAND PUMP LEVER)

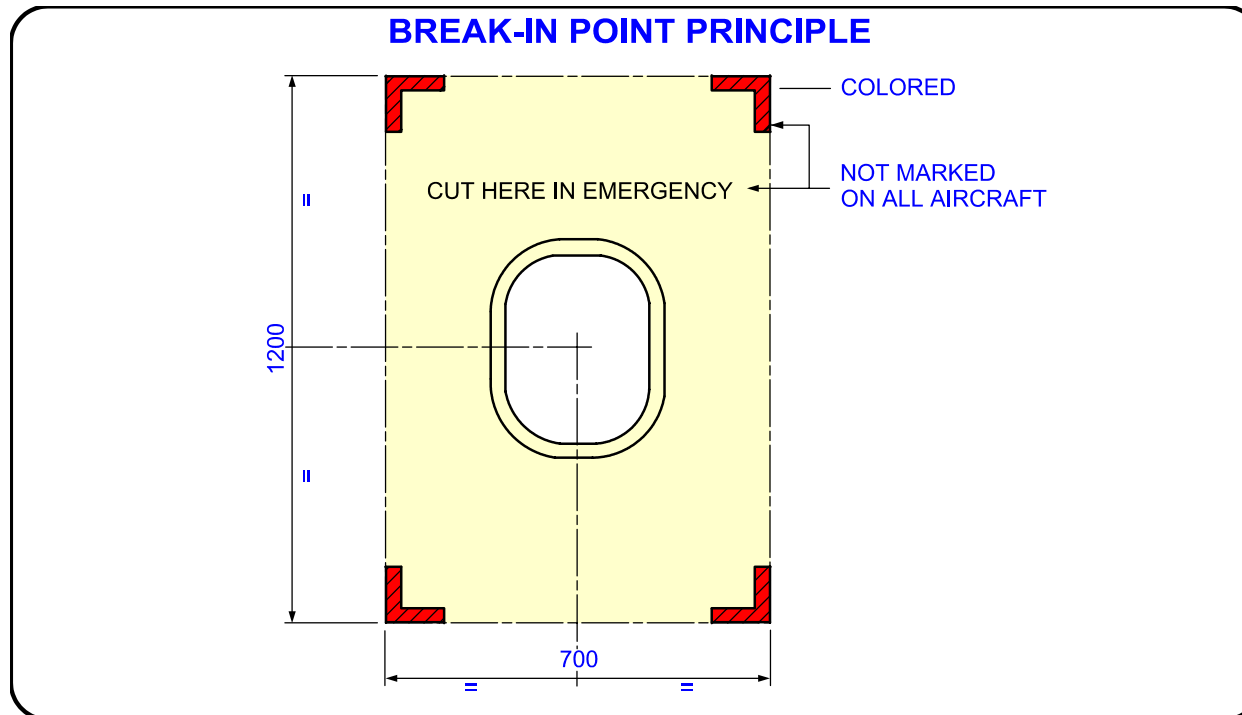

Structural Break-in Points - Principle



A318
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

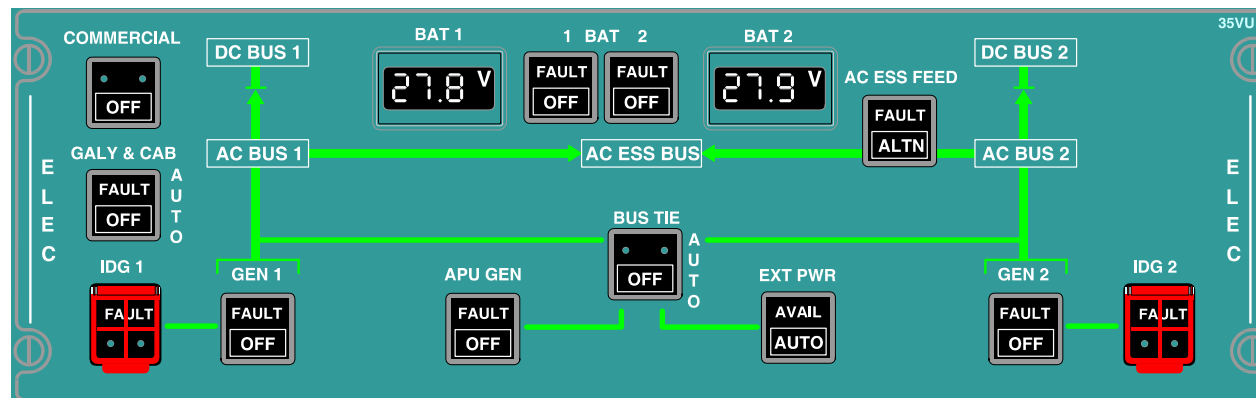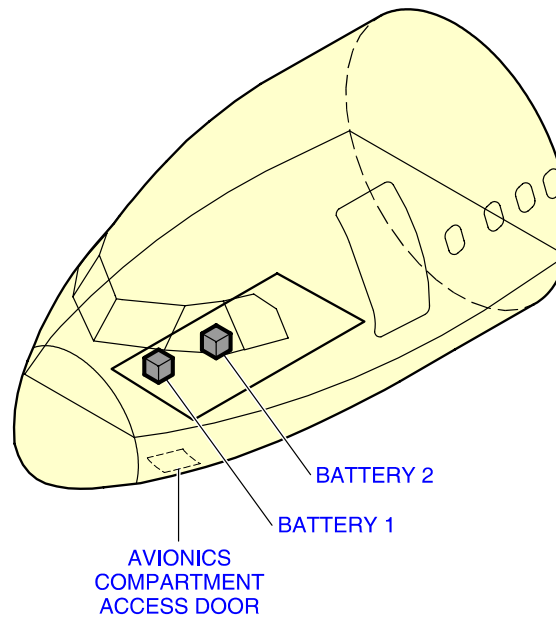

Batteries and Control Panel - Location


A318

AIRCRAFT RESCUE AND FIRE FIGHTING CHART

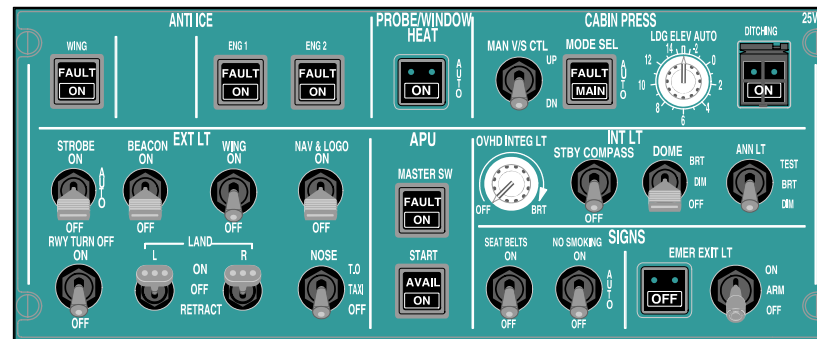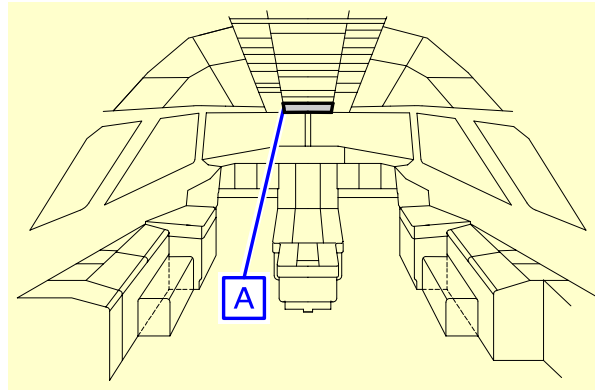


A

B

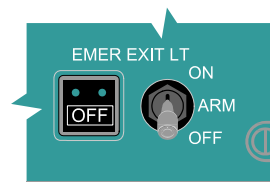


B

Emergency Exit Light Control Panel - Location



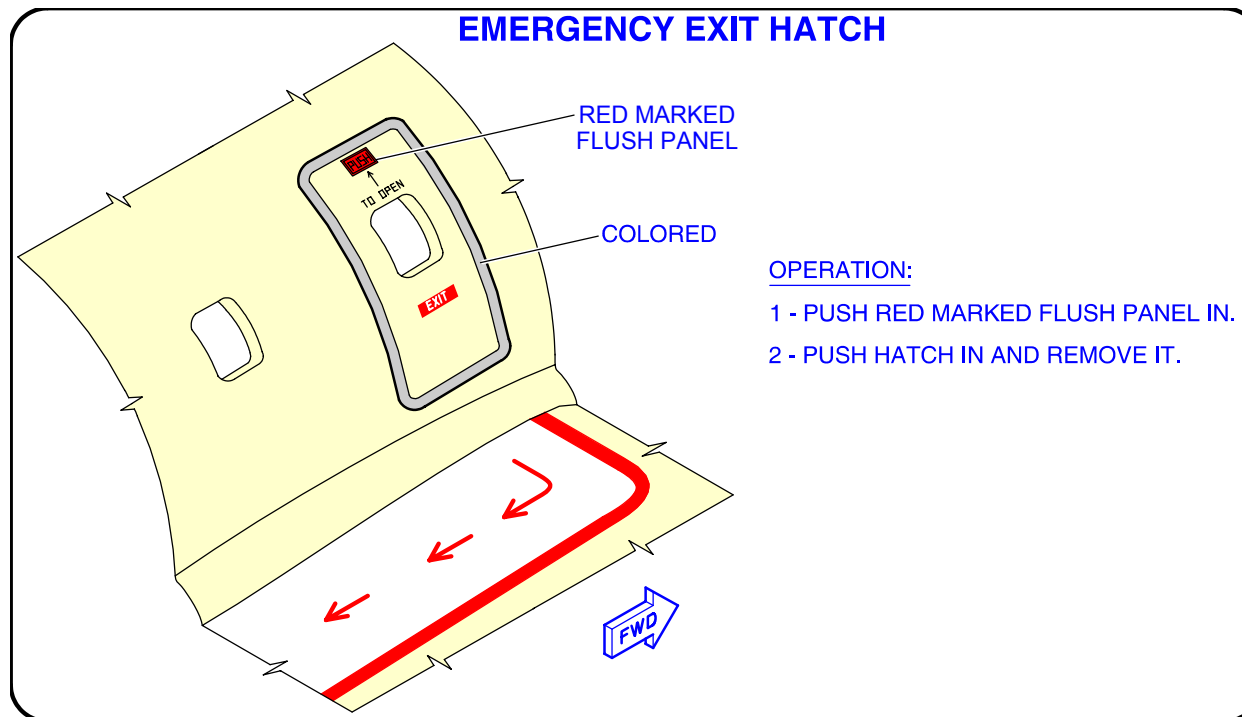


A318 AIRCRAFT RESCUE AND FIRE FIGHTING CHART


APU EXTERNAL CONTROL

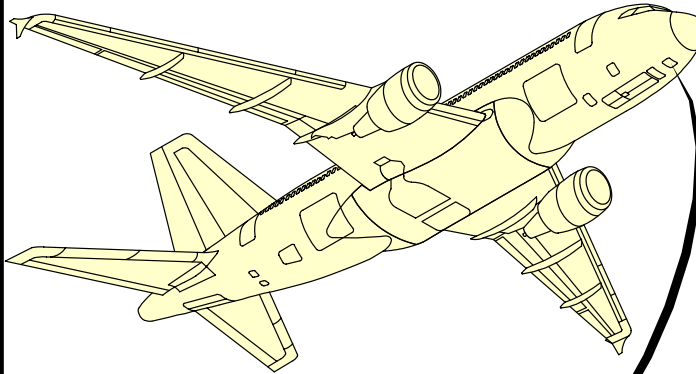


108VU

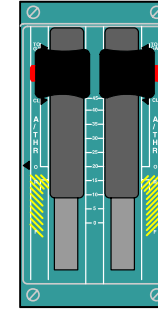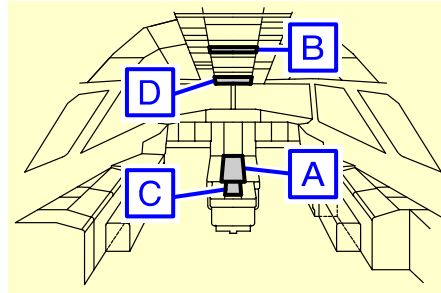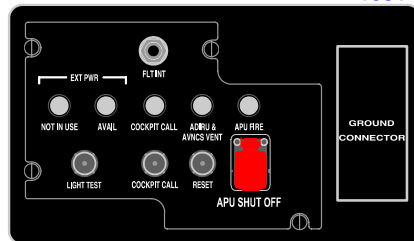


A

 

B

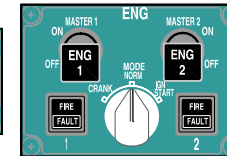


C

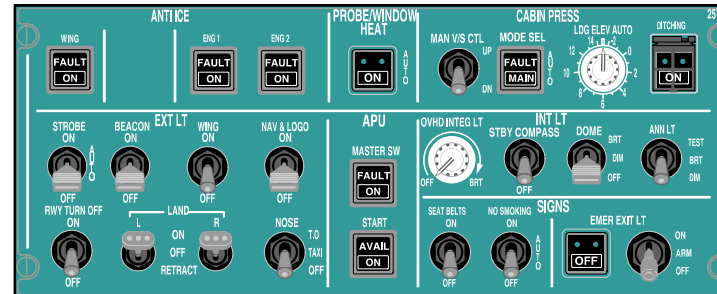

D

Engine and APU Controls and FIRE Panels - Location


BULK CARGO COMPARTMENT DOOR CONTROL

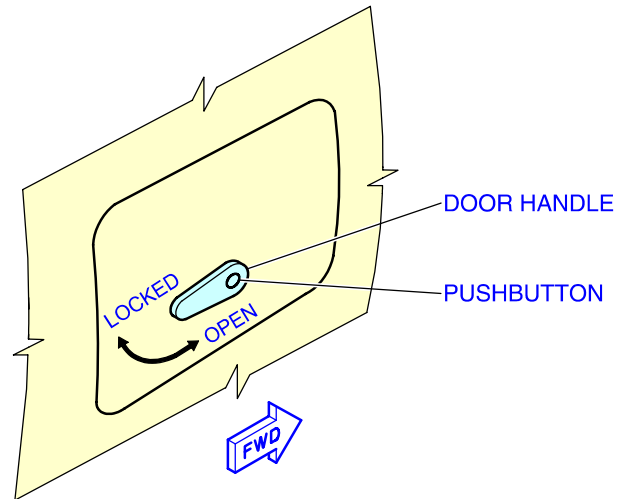

OPERATION:

- 1 - PUSH PUSHBUTTON TO RELEASE DOOR HANDLE.
- 2 - MOVE HANDLE DOWN TO "OPEN" POSITION.
- 3 - PUSH BULK DOOR IN. PUT DOOR HANDLE BACK IN "LOCKED" POSITION AND INTO RECESS.
- 4 - PUSH BULK DOOR UP UNTIL HOOK ENGAGES.


A318
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

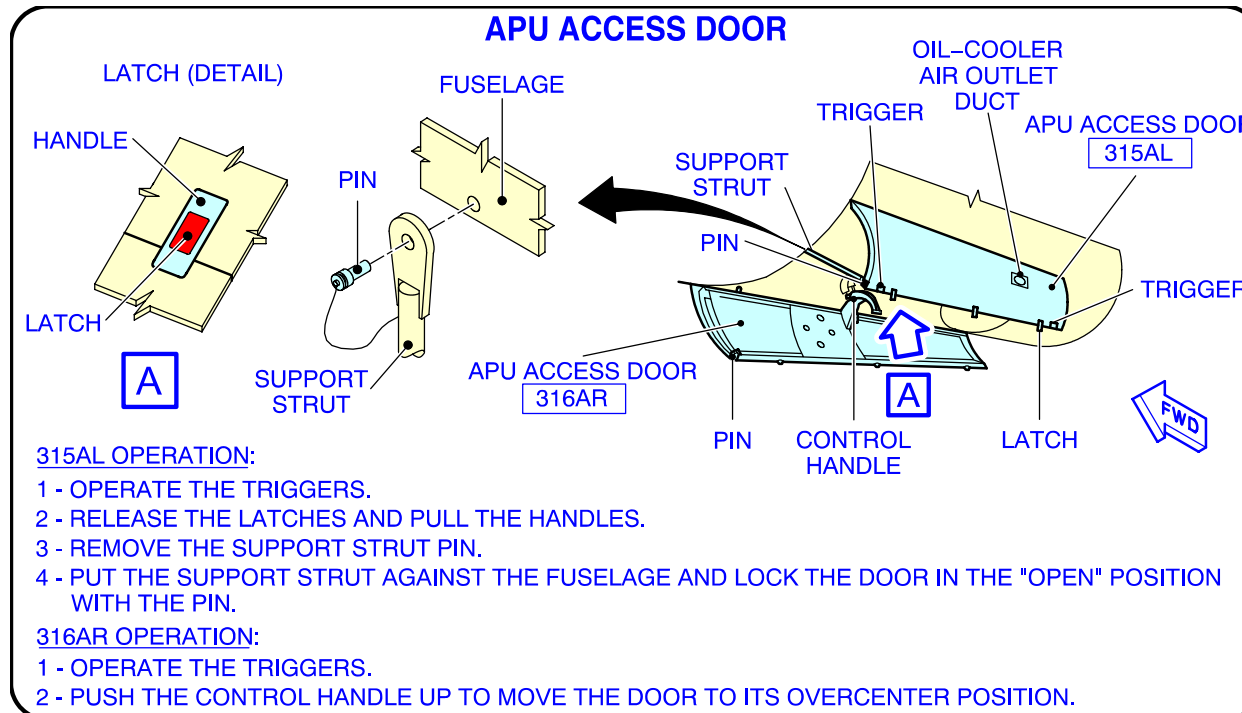

APU Compartment Access

A318
**AIRCRAFT RESCUE AND
 FIRE FIGHTING CHART**

GROUND CLEARANCES

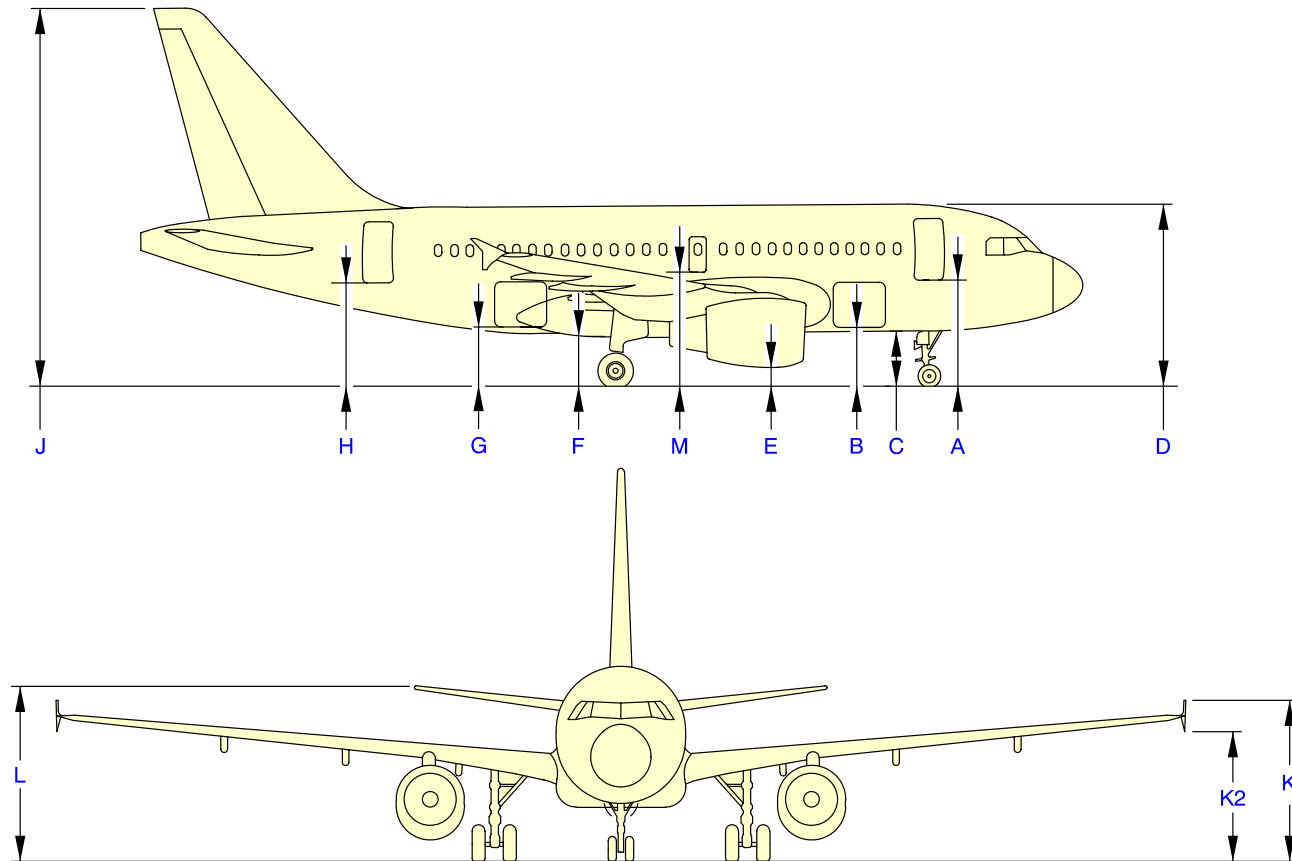

DIMENSIONS ARE APPROXIMATE

	m	ft
A	3.44	11.29
B	2.08	6.82
C	1.79	5.87
D	5.93	19.46
E (PW)	0.77	2.53
E (CFM)	0.65	2.13
F	1.70	5.58

	m	ft
G	2.31	7.58
H	3.72	12.21
J	12.93	42.42
K	5.06	16.60
K2	4.06	13.32
L	5.60	18.37
M	3.95	12.96

Aircraft Ground Clearances