



A340-600

Aircraft Rescue and Fire Fighting Chart ARFC

The content of this document is the property of Airbus S.A.S.
It is supplied in confidence and commercial security on its
contents must be maintained.
It must not be used for any purpose other than that for which it is
supplied, nor may information contained in it be disclosed to un-
authorized persons. It must not be reproduced in whole or in part
without permission in writing from the owners of the copyright.
Requests for reproduction of any data in this document and the
media authorized for it must be addressed to Airbus.

© Airbus S.A.S. 2002. All rights reserved.

AIRBUS S.A.S.
31707 BLAGNAC CEDEX, FRANCE
CUSTOMER SERVICES
TECHNICAL DATA SUPPORT AND SERVICES
PRINTED IN FRANCE
© AIRBUS S.A.S. 2002
ALL RIGHTS RESERVED

AN EADS COMPANY

 **A340-600**
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

NOTE

**THIS CHART GIVES THE GENERAL LAYOUT OF THE A340-600 STANDARD VERSION.
THE NUMBER AND ARRANGEMENT OF THE INDIVIDUAL ITEMS VARY WITH THE CUSTOMERS.**

ISSUED BY:

AIRBUS S.A.S.
CUSTOMER SERVICES
TECHNICAL DATA SUPPORT AND SERVICES
31707 BLAGNAC CEDEX
FRANCE

REVISION DATE: MARCH 2007
REFERENCE : F_RF_000000_1_A340600

 **A340-600**


AIRCRAFT RESCUE AND FIRE FIGHTING CHART

 **A340-600**
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

TABLE OF CONTENTS

Page 1	Highly Flammable and Hazardous Materials and Components - Location
Page 2	Composite Materials - Location
Page 3	Landing Gear Ground Lock Safety Pin - Installation
Page 4	Interphone Jack Sockets - Location
Page 5	Evacuation/Escape Slide/Raft - Location
Page 6	Passenger/Crew Doors and Emergency Exits - Opening
Page 7	Cargo Doors - Opening
Page 8	Structural Break-in Points - Principle
Page 9	Batteries and Control Panel - Location
Page 10	Emergency Exit Light Control Panel - Location
Page 11	Engine and APU Controls and FIRE Panels - Location
Page 12	APU Compartment Access
Page 13	Aircraft Ground Clearances


A340-600 AIRCRAFT RESCUE AND FIRE FIGHTING CHART

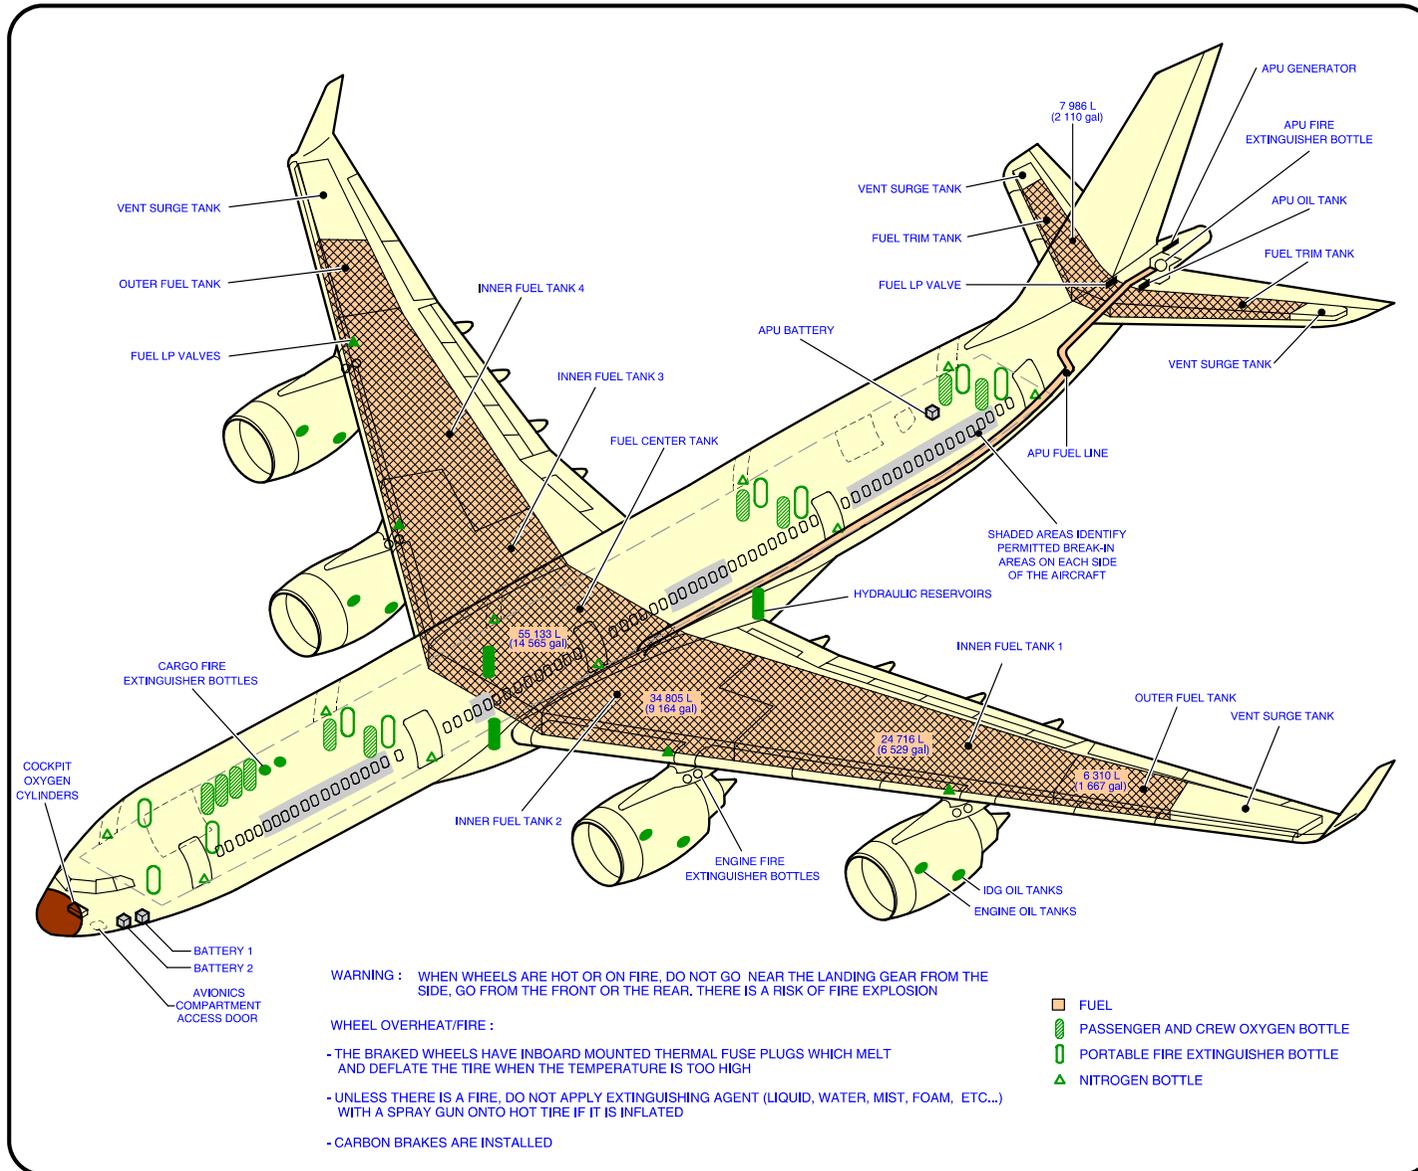

Highly Flammable and Hazardous Materials and Components - Location


A340-600
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

- Carbon Fiber Reinforced Plastic (CFRP)
- Glass Fiber Reinforced Plastic (GFRP)
- Aramid Fiber Reinforced Plastic (AFRP)

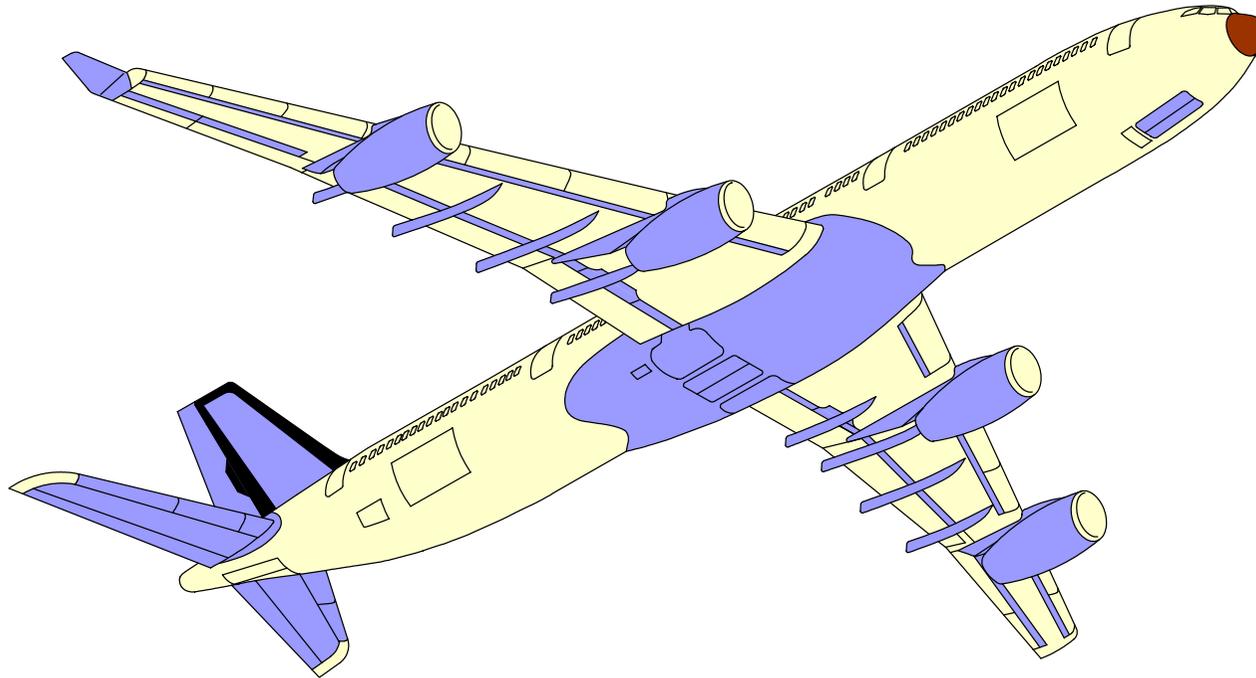


Composite Materials - Location


A340-600
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

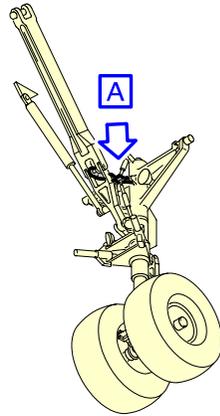


NOSE LANDING GEAR

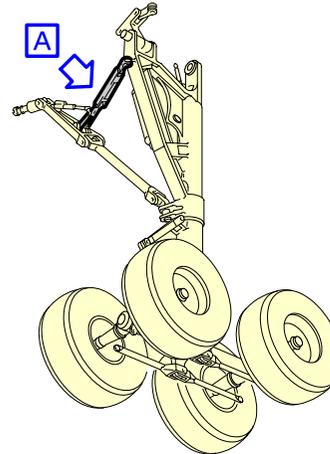

MAIN LANDING GEAR

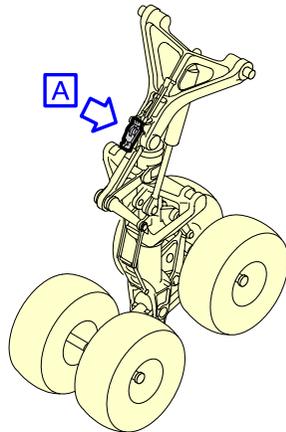


CENTERLINE LANDING GEAR

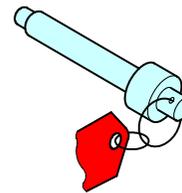


Landing Gear Ground Lock Safety Pin - Installation

A340-600
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

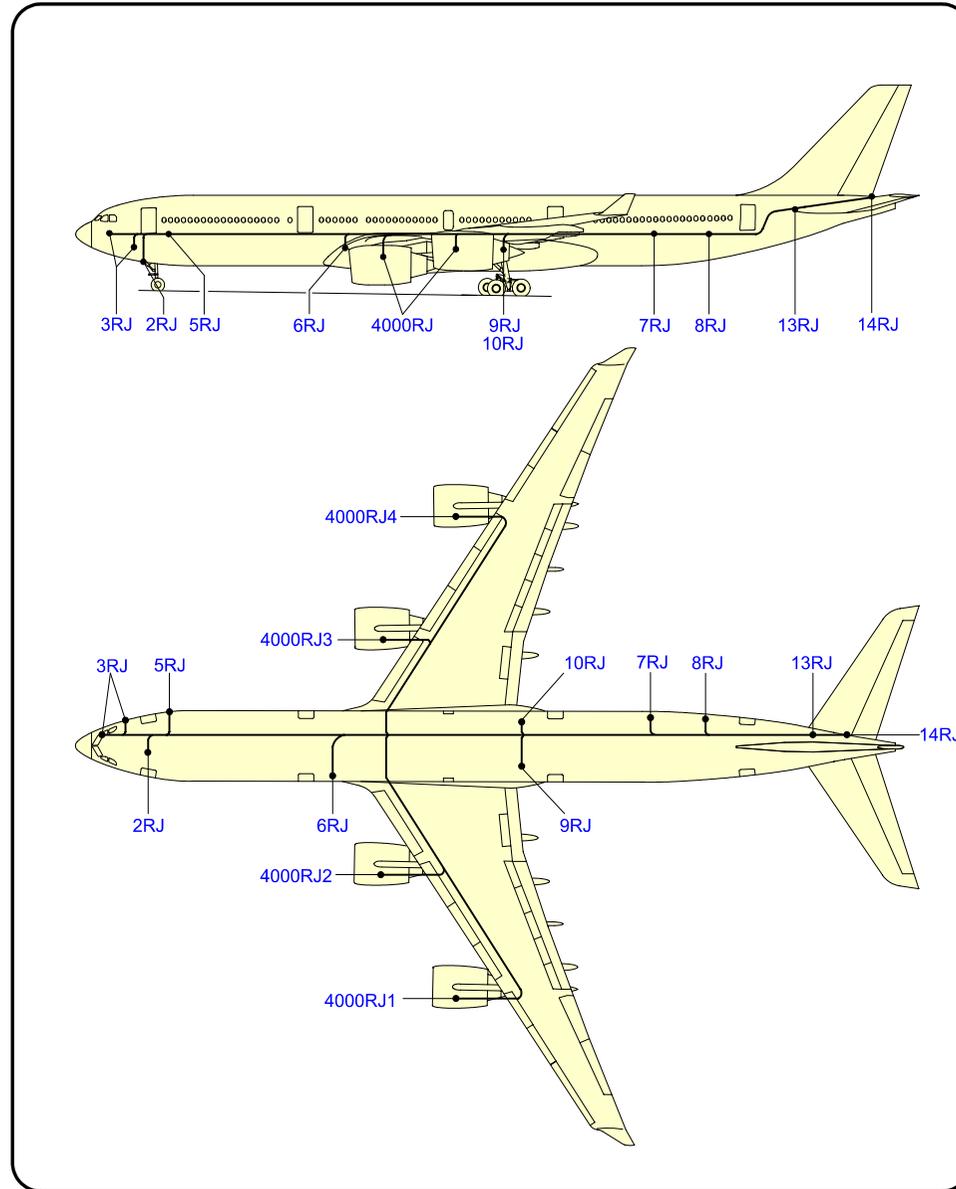


Interphone Jack Sockets - Location

A340-600
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

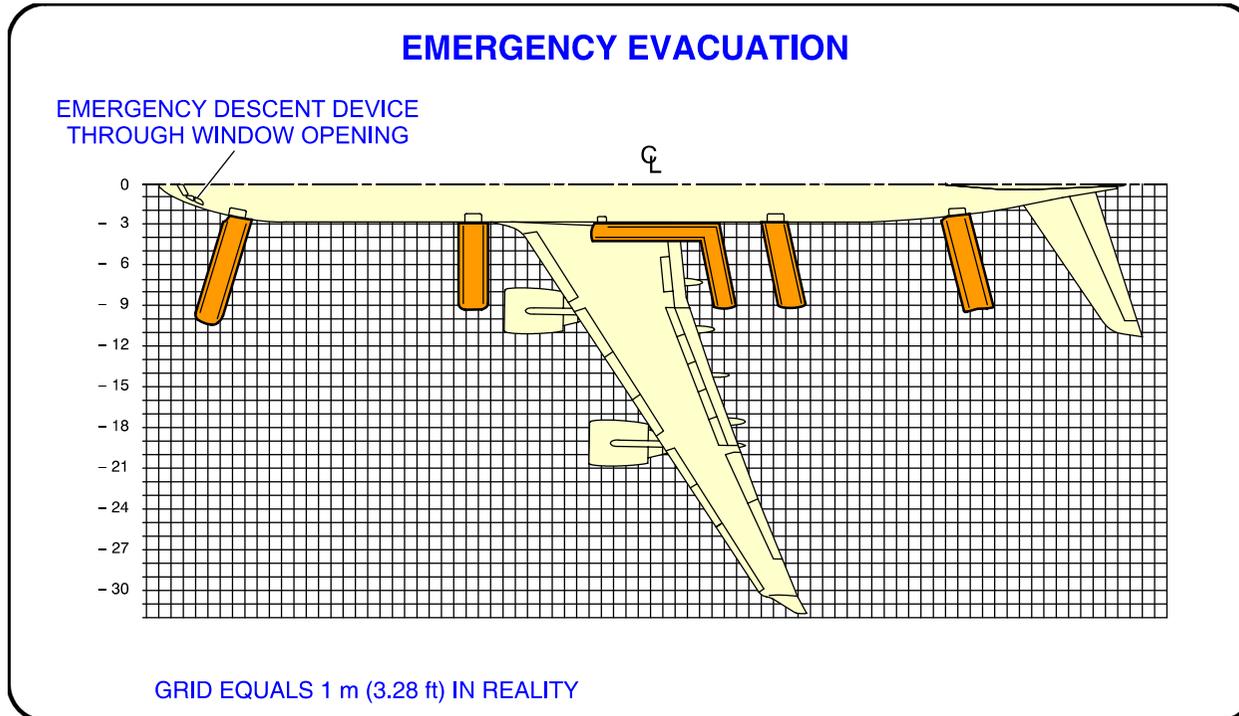


Evacuation/Escape Slide/Raft - Location

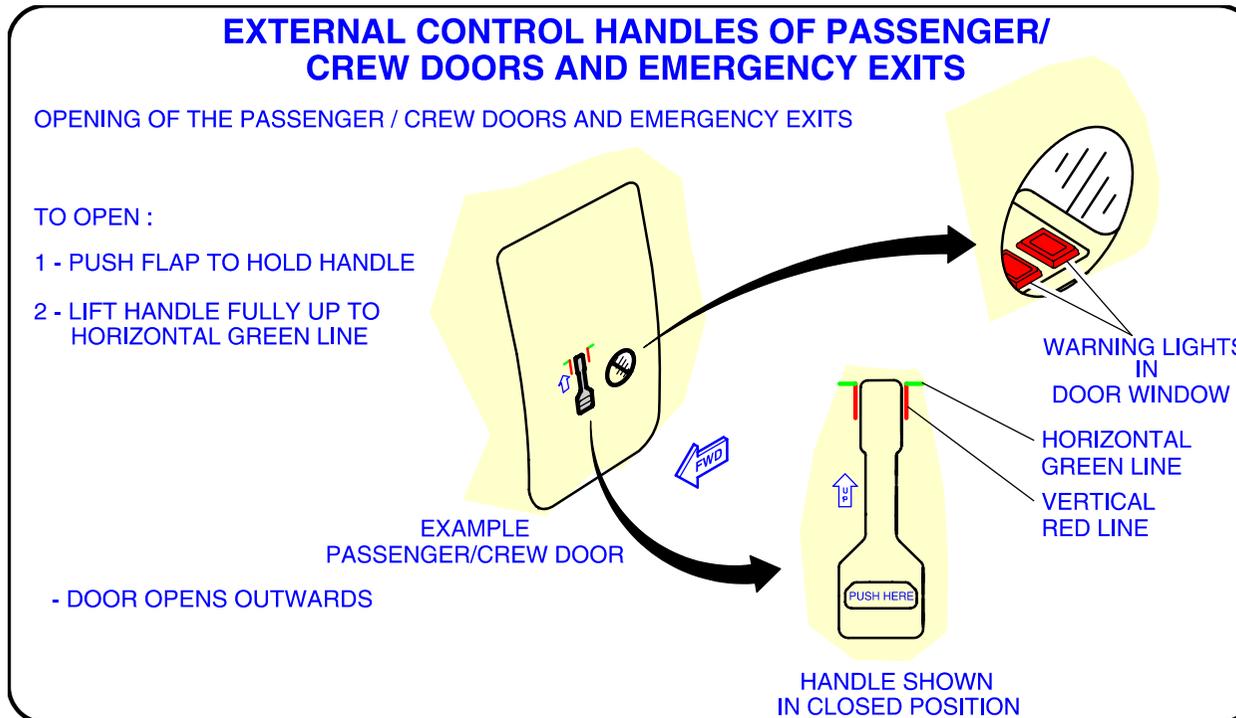

A340-600
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

FWD AND AFT CARGO COMPARTMENT DOOR CONTROLS

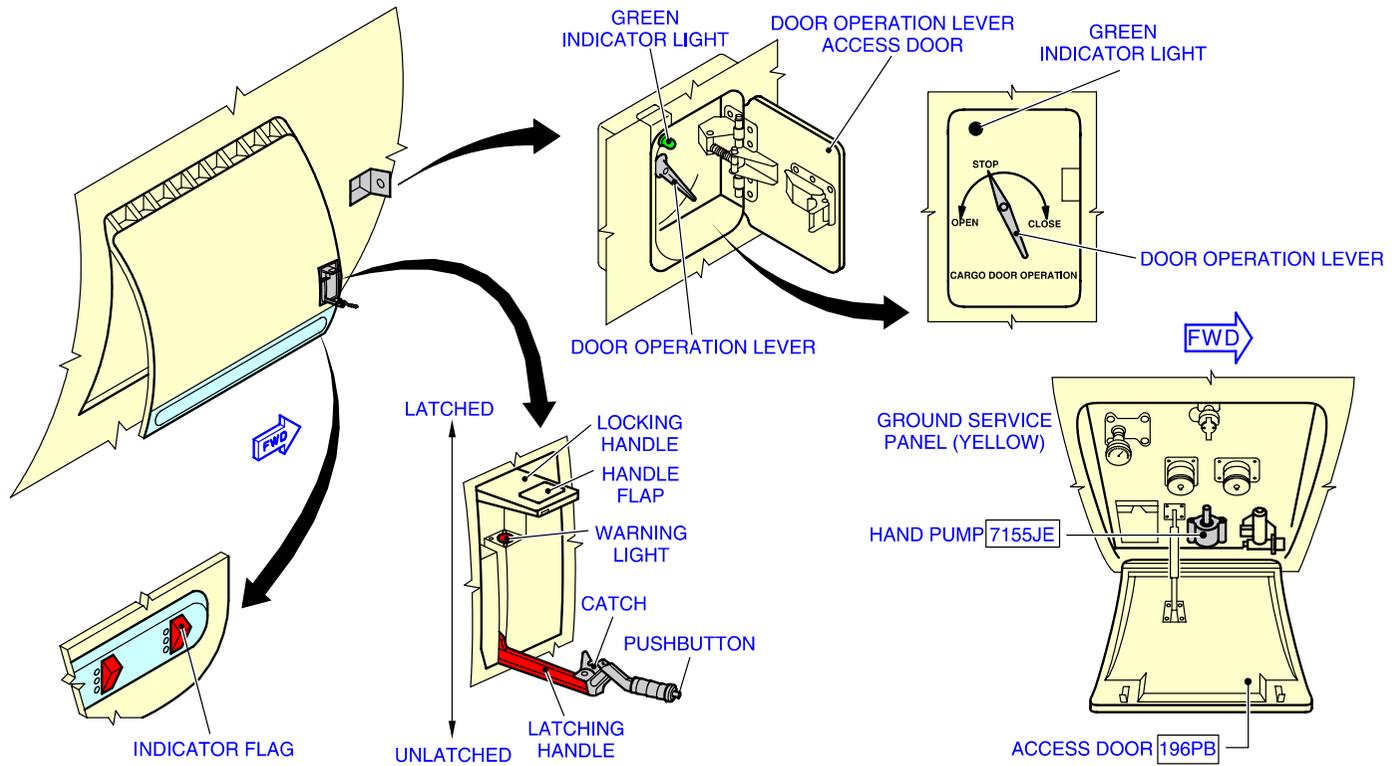

NORMAL OPERATION:


- 1 - PUSH THE HANDLE FLAP IN AND PULL THE LOCKING HANDLE TO THE "UNLOCKED" POSITION. ALL INDICATOR FLAGS ARE OUT.
- 2 - PRESS THE PUSHBUTTON ON THE TOP OF THE LATCHING HANDLE AND PULL IT TO THE "UNLATCHED" POSITION.
- 3 - OPEN THE DOOR OPERATION LEVER ACCESS DOOR.
- 4 - MOVE THE DOOR OPERATION LEVER TO THE "OPEN" POSITION AND HOLD IT UNTIL THE GREEN INDICATOR LIGHT COMES ON. (DOOR FULLY OPENED AND LOCKED)
- 5 - RELEASE THE DOOR OPERATION LEVER.

NOTE: THE LEVER GOES AUTOMATICALLY TO THE "STOP" POSITION. IF NOT, MOVE IT MANUALLY.

MANUAL OPERATION:


(TWO PERSONS ARE NECESSARY FOR THIS OPERATION)

- 1 - DO THE OPERATIONS 1 TO 3 AS FOR "NORMAL OPERATION".
- 2 - MOVE THE DOOR OPERATION LEVER TO THE "OPEN" POSITION AND HOLD IT DURING OPERATION OF THE HAND PUMP.
- 3 - IN THE BELLY FAIRING AREA, OPEN THE GREEN AND YELLOW GROUND SERVICE PANEL ACCESS DOORS 197FB AND 196PB.
- 4 - REMOVE THE HAND PUMP LEVER FROM GREEN GROUND SERVICE PANEL.
- 5 - ON THE YELLOW GROUND SERVICE PANEL, INSTALL THE HAND PUMP LEVER ON THE HAND PUMP 7155JE AND OPERATE IT UNTIL THE CARGO DOOR IS FULLY OPEN. (YOU CAN FEEL THE FORCE INCREASE ON THE HAND PUMP LEVER)

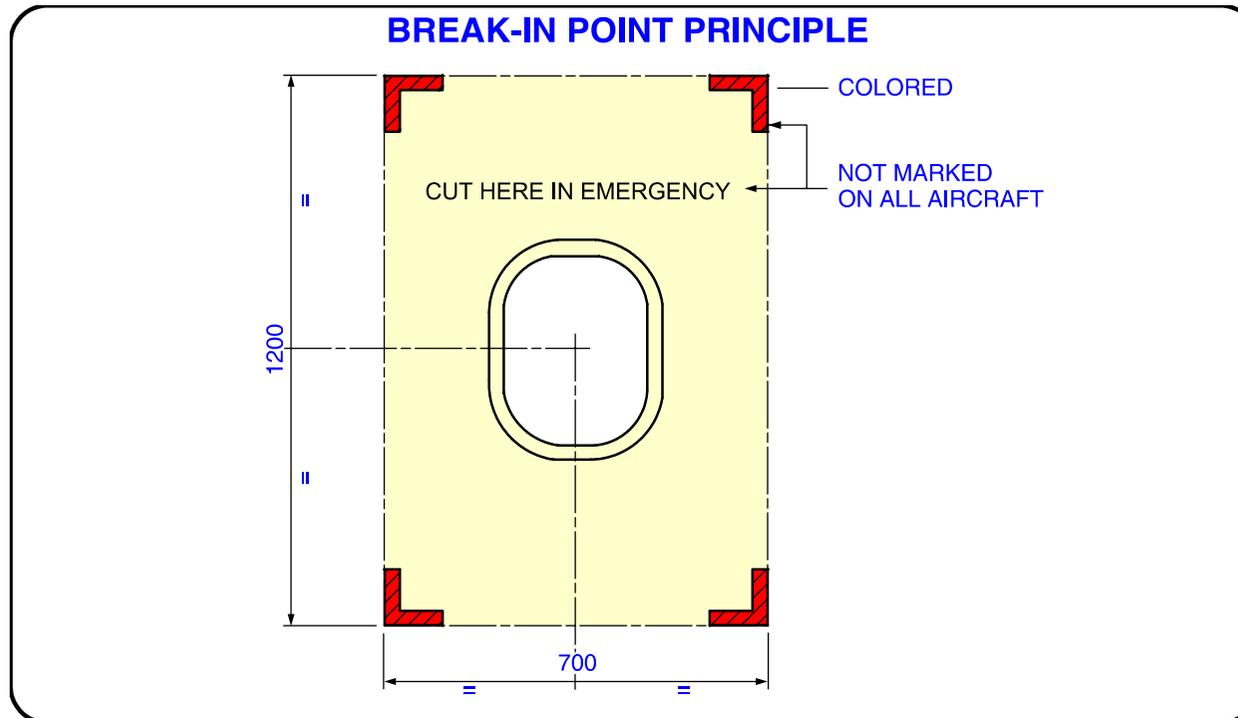



Structural Break-in Points - Principle

A340-600 AIRCRAFT RESCUE AND FIRE FIGHTING CHART

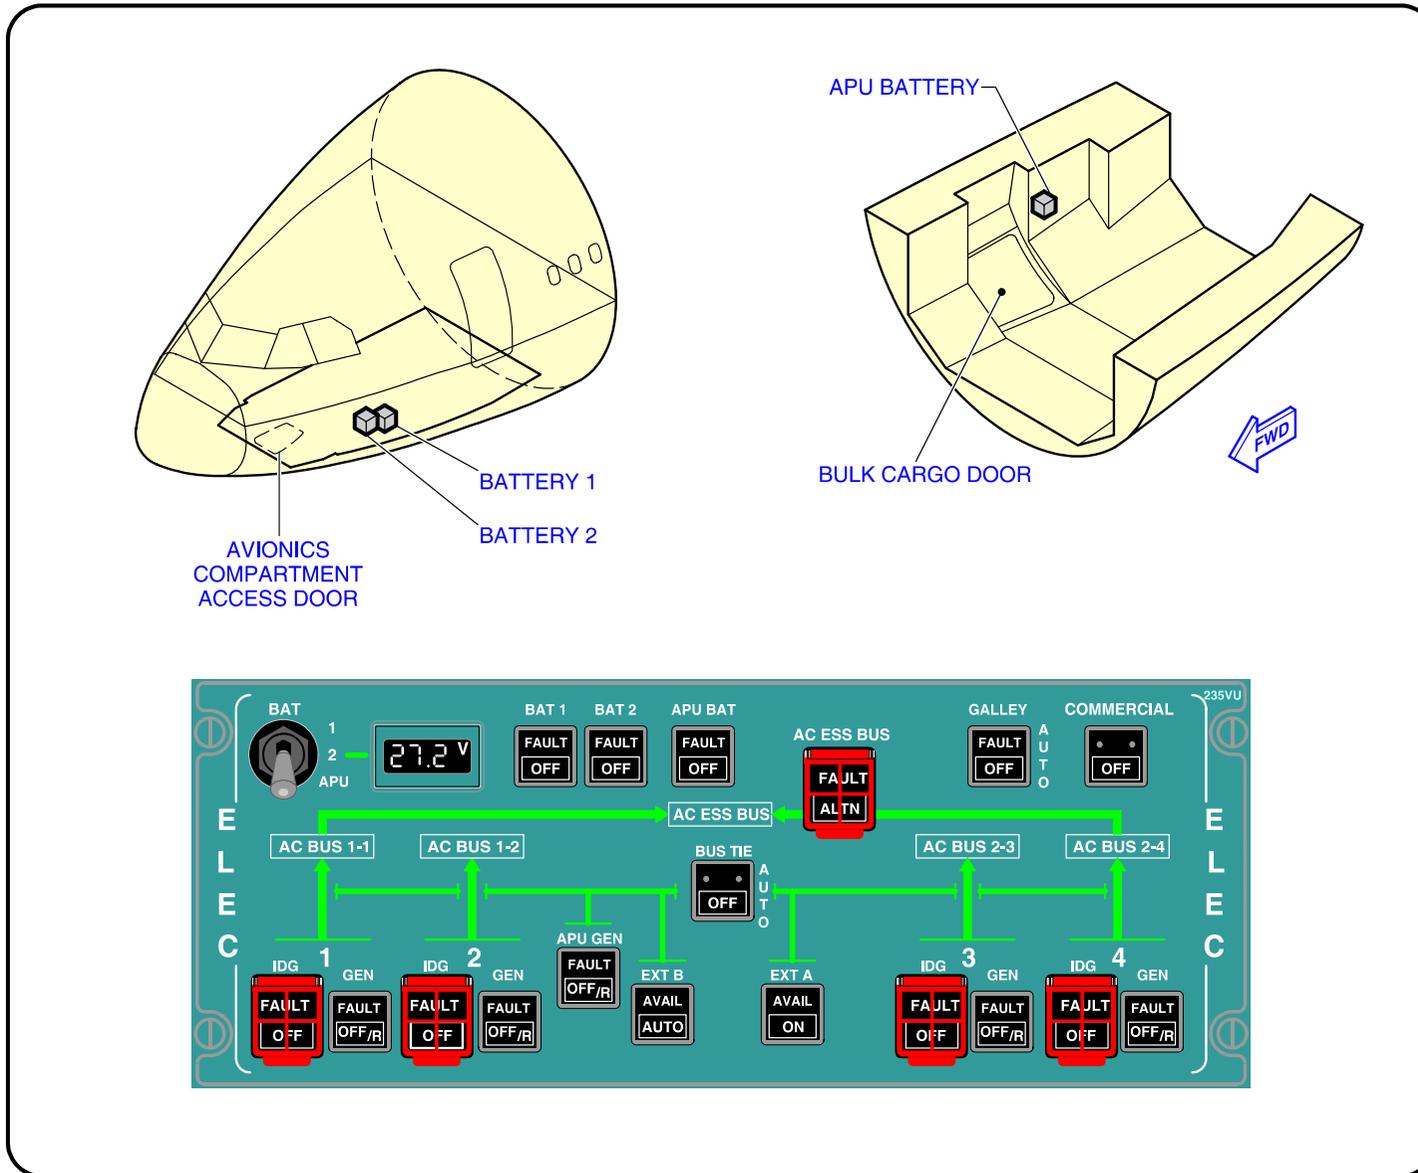


Batteries and Control Panel - Location

A340-600
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

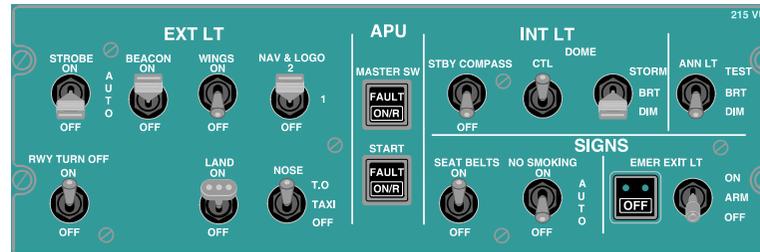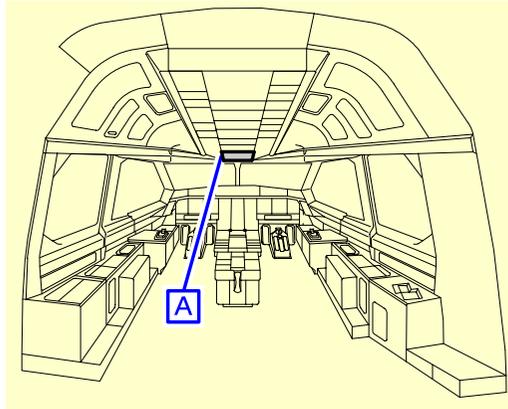

A


B

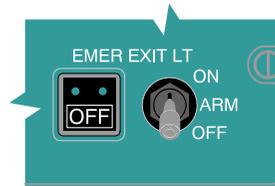

B


Emergency Exit Light Control Panel - Location

A340-600 AIRCRAFT RESCUE AND FIRE FIGHTING CHART

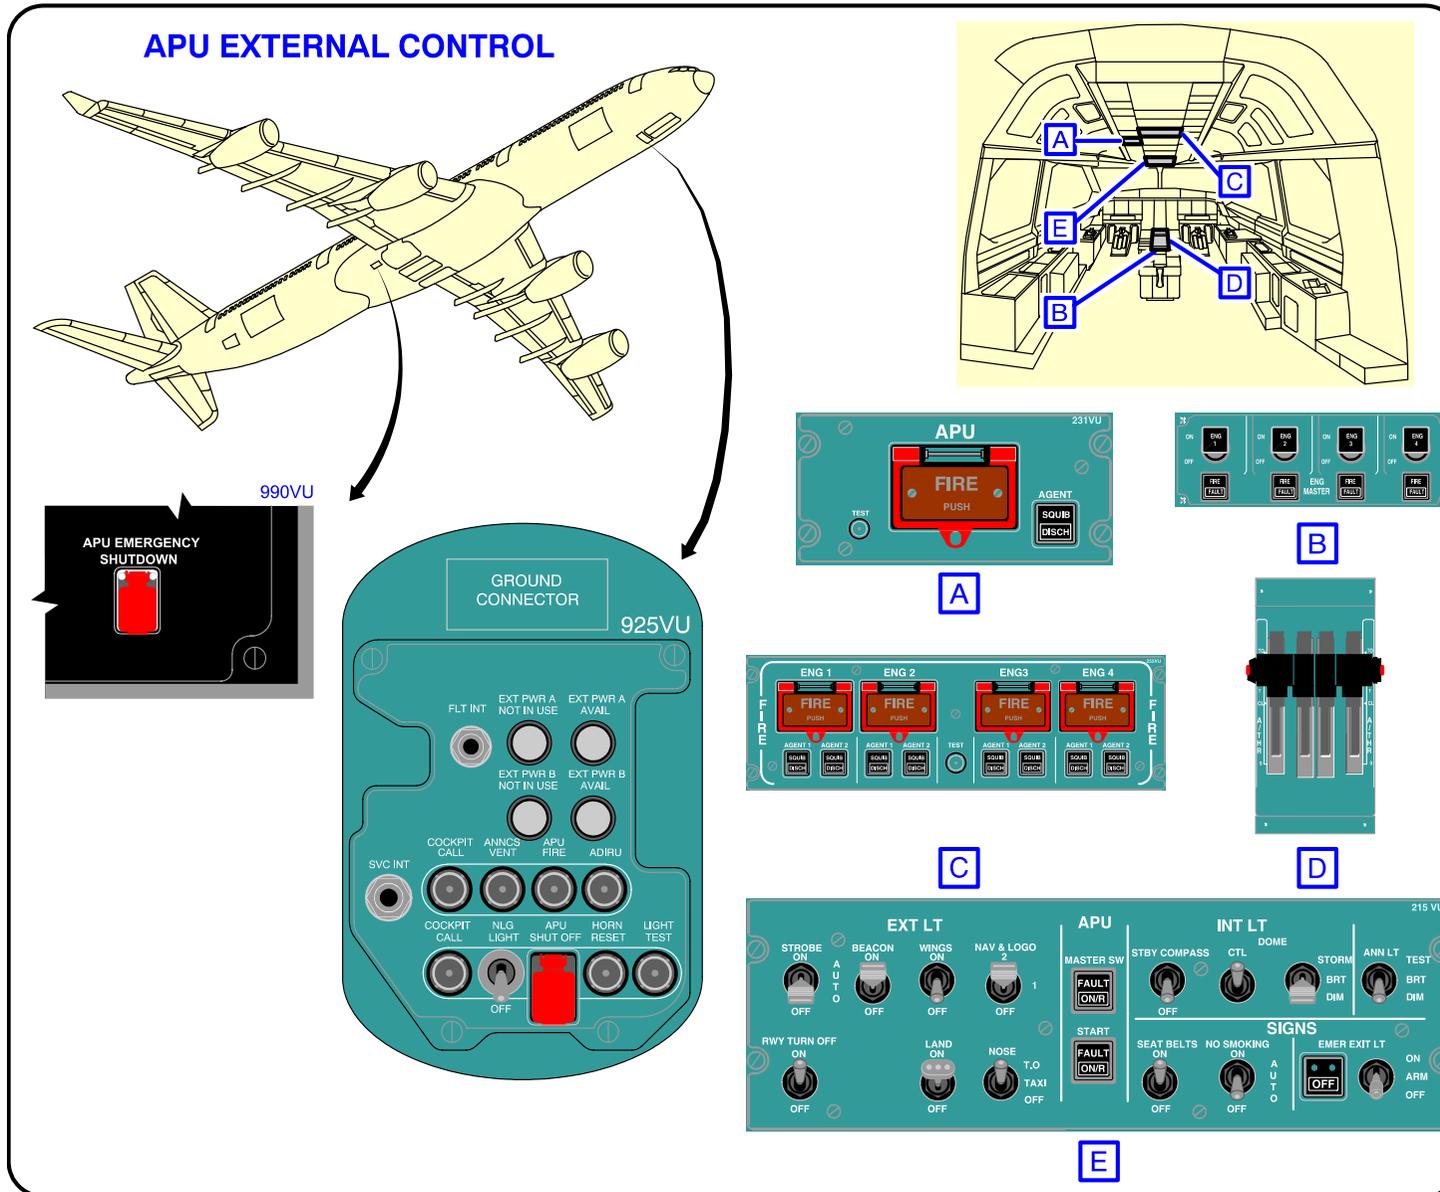

Engine and APU Controls and FIRE Panels - Location


A340-600
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

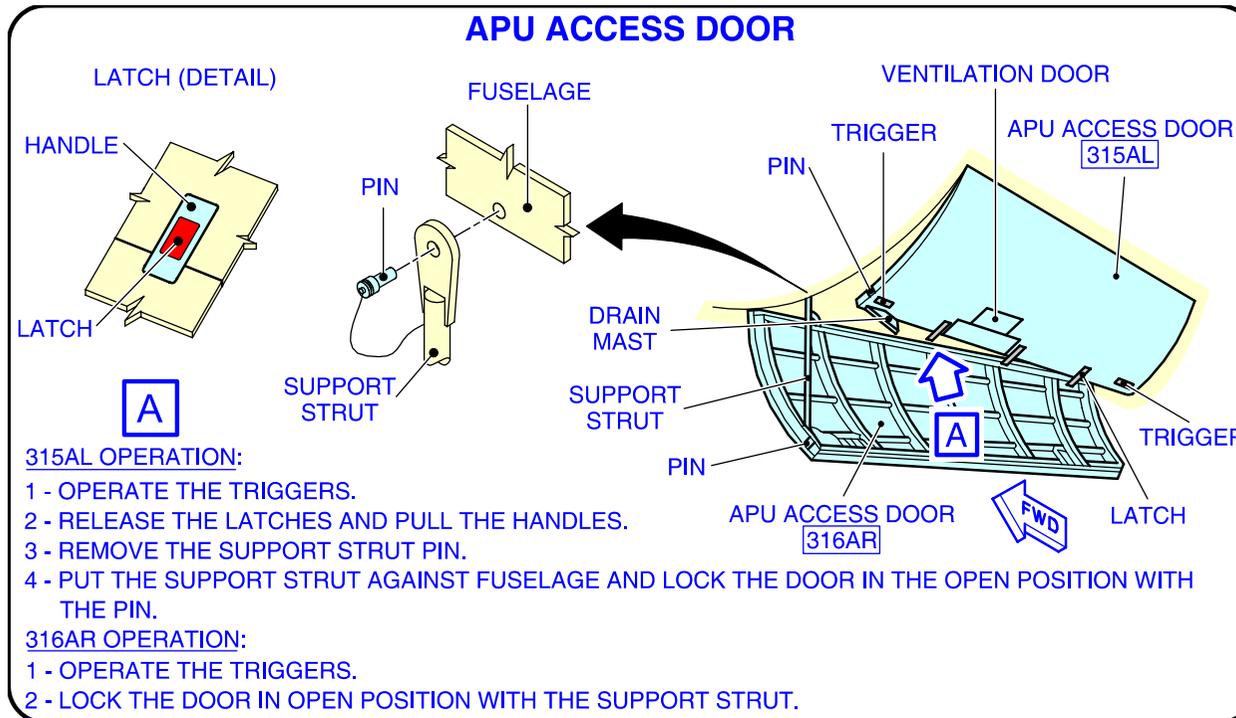

APU Compartment Access

A340-600
AIRCRAFT RESCUE AND
FIRE FIGHTING CHART

GROUND CLEARANCES

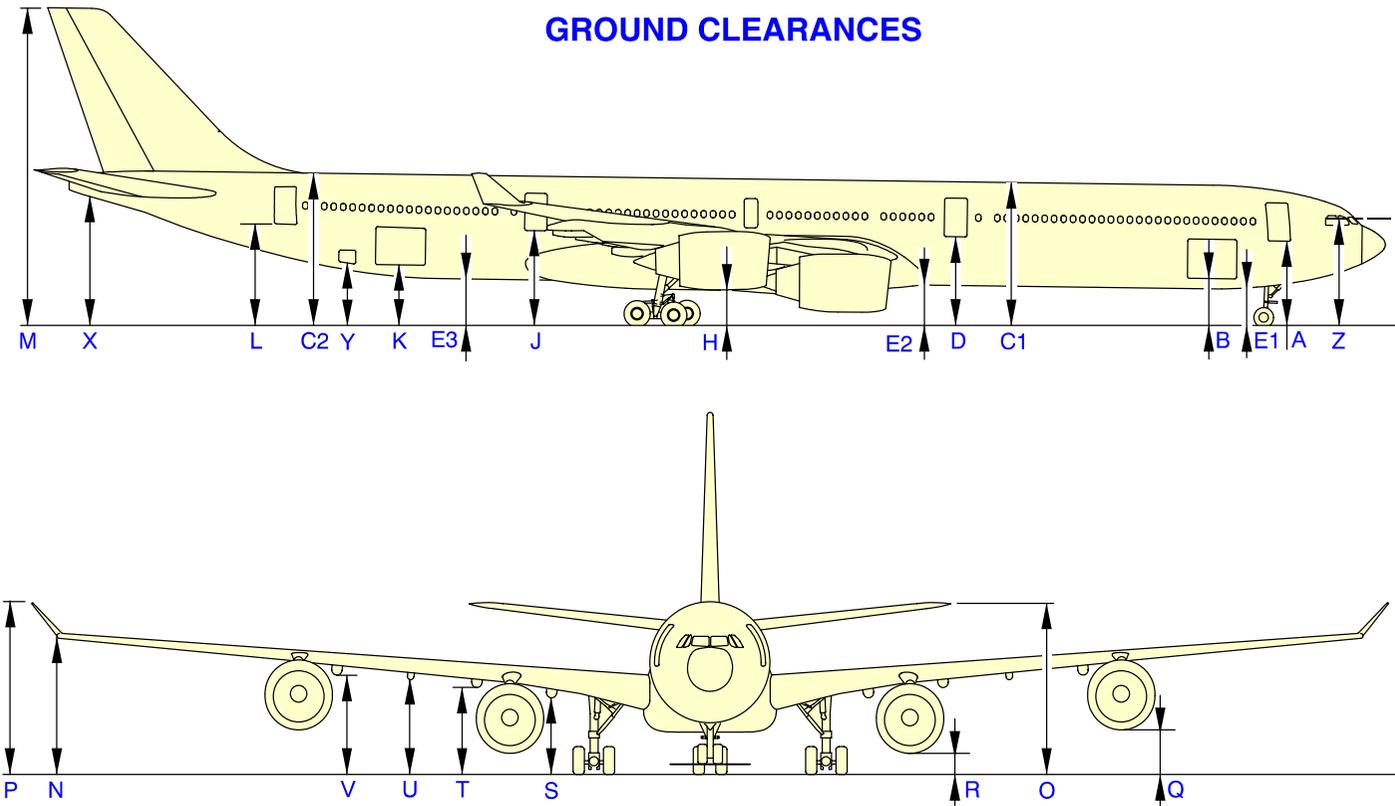

DIMENSIONS ARE APPROXIMATE

	m	ft
A	4.60	15.08
B	2.70	8.86
C1	7.81	25.61
C2	8.27	27.12
D	4.82	15.81
E1	1.99	6.53
E2	2.17	7.11
E3	2.47	8.09
H	1.66	5.46
J	5.12	16.79
K	3.31	10.84
L	5.50	18.03
M	17.73	58.17
N	5.96	19.55

	m	ft
O	8.39	27.54
P	7.56	24.81
Q	1.56	5.12
R	0.52	1.71
S	3.65	11.97
T	4.12	13.53
U	4.17	13.67
V	4.58	15.01
X	7.04	23.11
Y	3.40	11.14
Z	5.72	18.77

Aircraft Ground Clearances